

# CHECKERED RACING

## Shock & Ride Height Information

QA1 Alumina Matrics (ALN3855) - 9 3/4" to 10 1/4" Ride Height  
 QA1 Proma Stars (DR3855) - 9 1/2" TO 10" Ride Height


Ride Height Is Measure From Center  
 Of Shock Bolt To Center Of Shock Bolt.

## Tubular Front End Kit

Not To Scale

Mount The Shock Mounts On Top Outside  
 Edge Of The Frame, Center The Mounts  
 On The Centerline Of Front-End.

If Using Stock Frame And The Frame  
 Rails Are Not Parallel To The Centerline  
 Of The Car, Trim The Control Arm Mounts  
 So The Control Arm Bolt Stays Parallel With  
 The Centerline Of The Car.

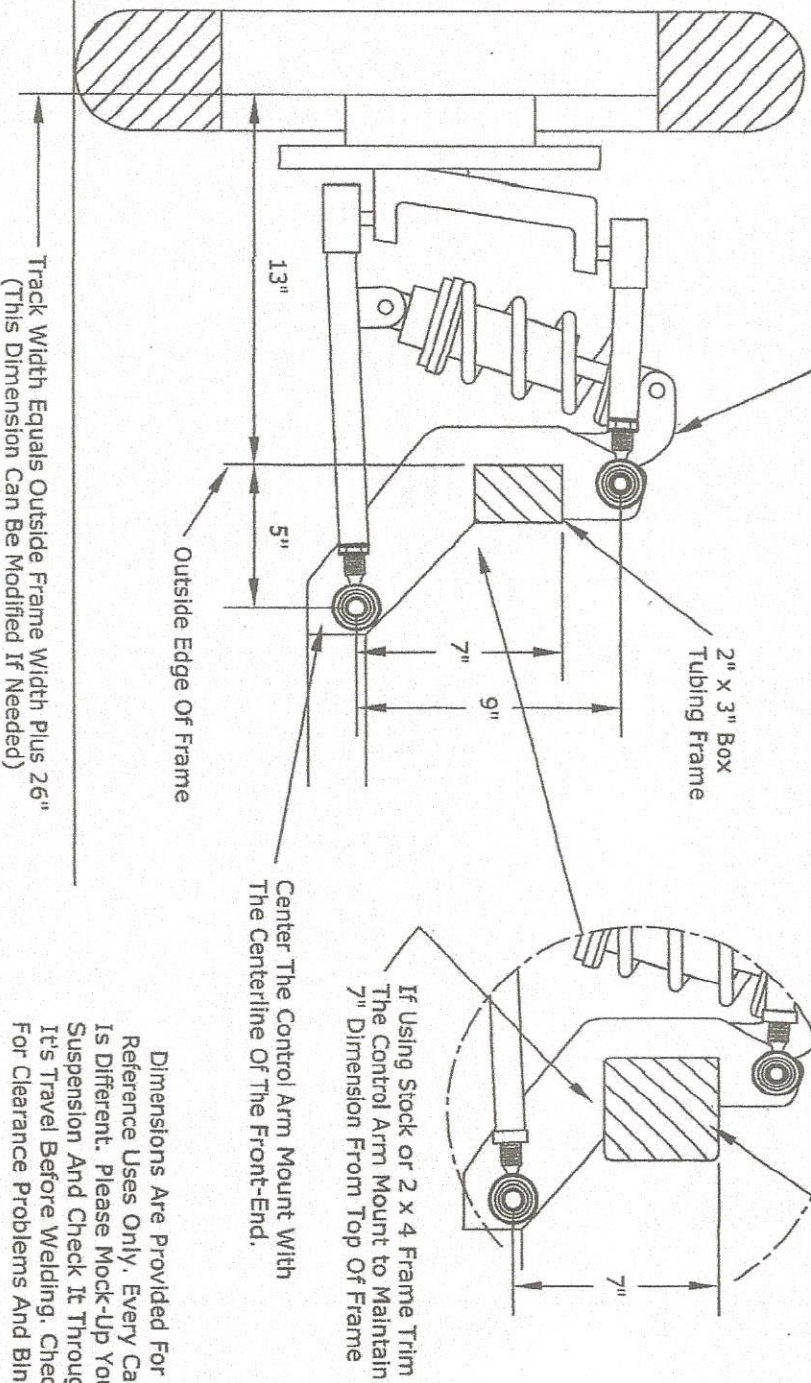

Dimensions Are Provided For  
 Reference Uses Only. Every Car  
 Is Different. Please Mock-Up Your  
 Suspension And Check It Through  
 It's Travel Before Welding. Check  
 For Clearance Problems And Bind.